



<1> POWER ON = 24 V electronics supply OFF --> ON or RESET button.  
 <2> The sequence control is implemented according to the PROFdrive profile.  
 <3> If a DO Infeed (ALM, BLM and SLM) is used, it closes the line contactor (refer to [8732][8832][8932]) and not the DO SERVO/VECTOR.  
 <4> These control commands can also be triggered by a fault response.  
 <5> STWA.xx = control word, sequence control, bit xx (r0898) [2501]; ZSWA.xx = status word, sequence control bit xx (r0899) [2503].  
 <6> Only if „Safety Integrated“ is active.  
 <7> The parameters p1226, p1227 and p1228 influence this status.