



 
 
 
control accessories

d-c field rheostats types LK and LR

for d-c motors and generators

handwheel or sprocket operated

renewal
parts data
14-515A1
page 1

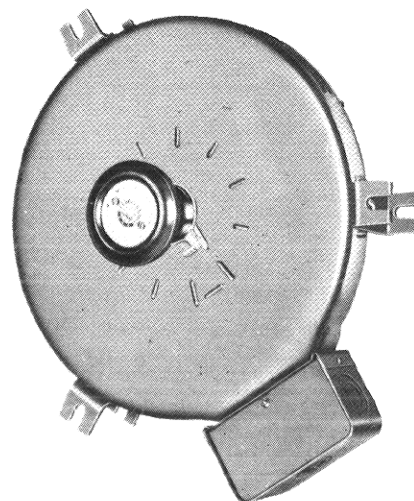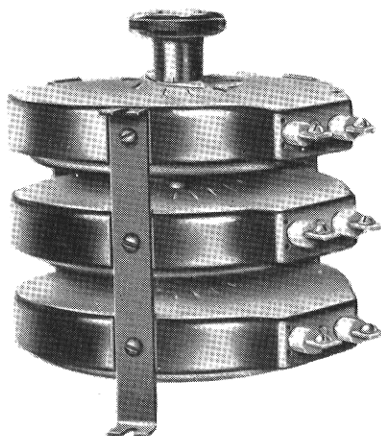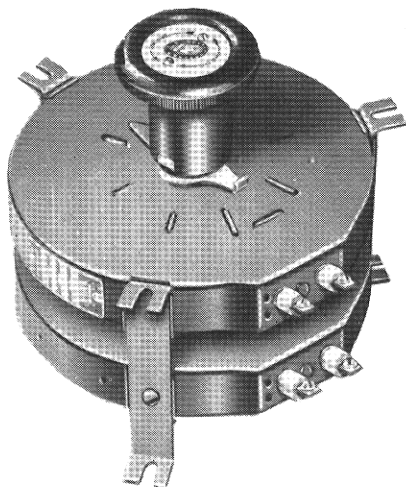


ordering information

- Name the part and give its style number.
- Give the complete nameplate reading.
- State whether shipment is desired by express, freight or parcel post.
- Send all orders or correspondence to nearest sales office of the company.

September 1951

new information

E41-6B, C, D, E, H; D61-6B, C, E, H

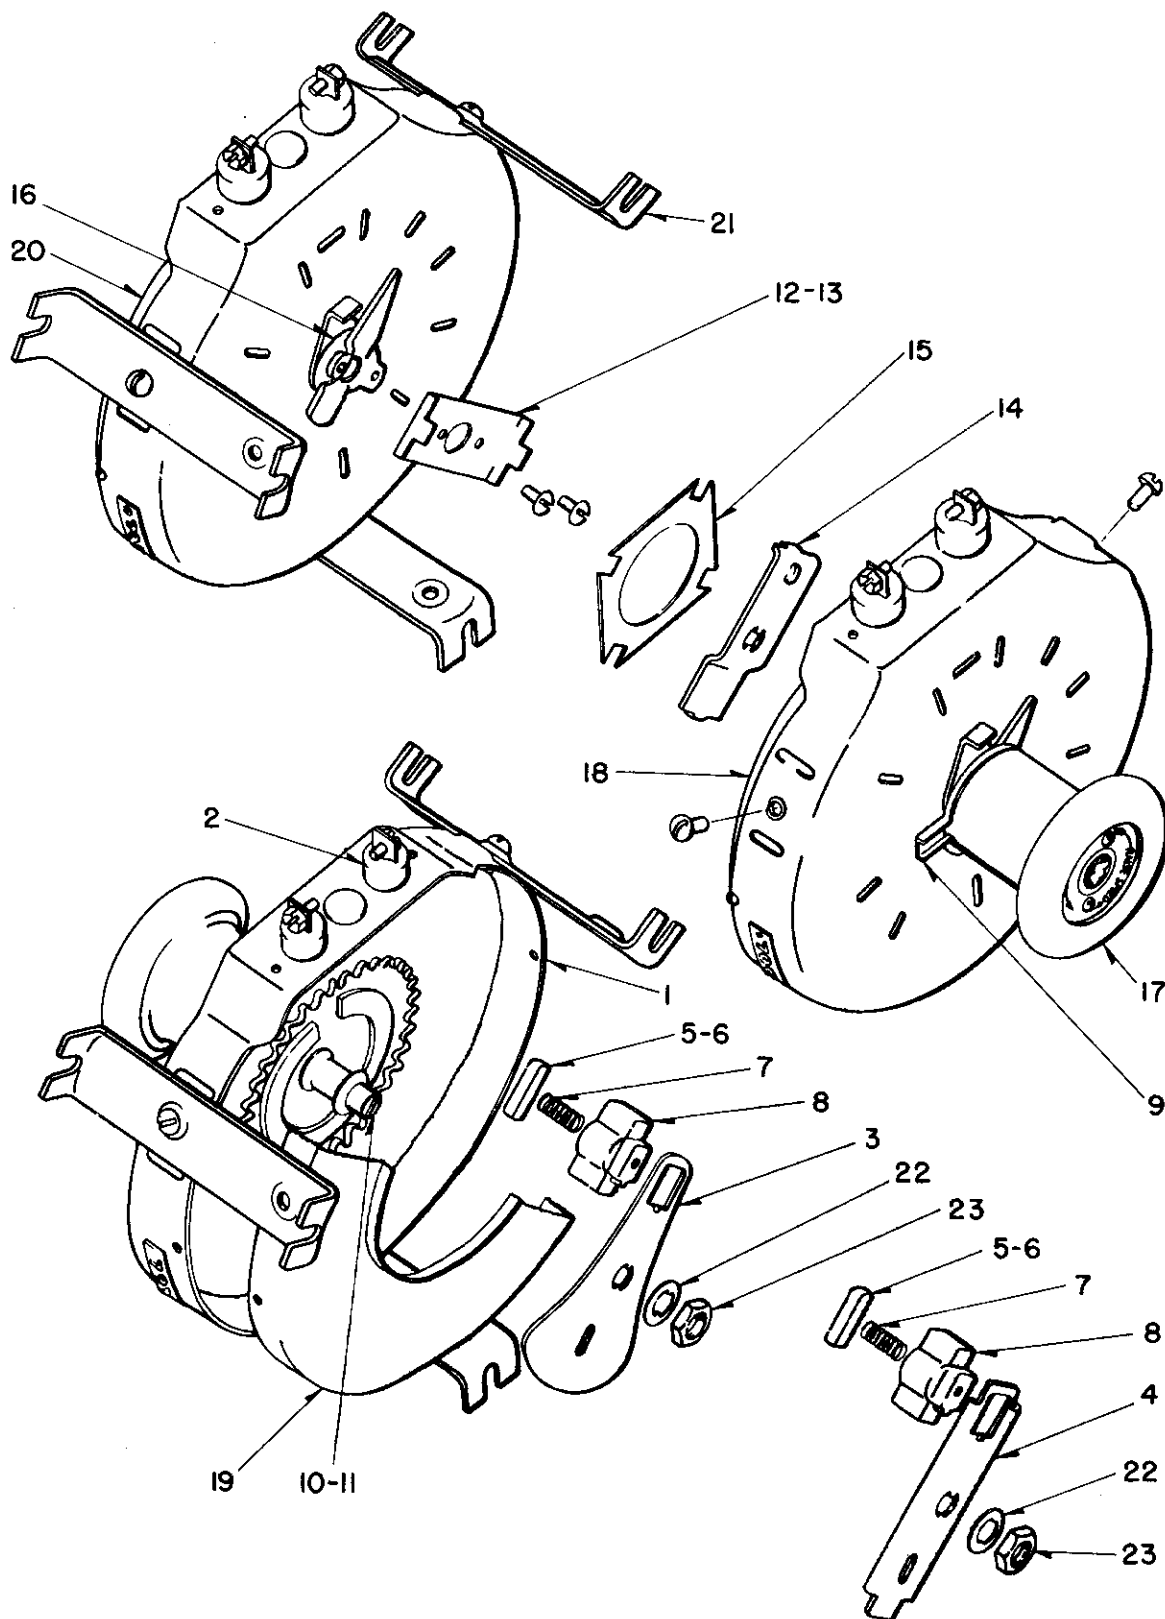

for types "LK" and "LR" rheostats

ref. no.	description of part	style number of part			no. per plate	no. per rheostat
		6 inch	8 inch	13 inch		
1	†† plate only complete with element, terminals and stop				..	..
2	terminal assembly with insulating bushings	1595 473	1595 473	1595 473	2	..
3	contact arm—for "LK" rheostat	1620 362	1620 362	1620 362	1	..
4	contact arm—for "LR" rheostat	1620 362	1620 350	1620 351	1	..
5	contact—moving, standard	1554 689	1554 689	1554 689	*1	..
6	moving contact—silver faced—(used on special applications)	1554 690	1554 690	1554 690	*1	..
7	contact—spring	1554 688	1554 688	1554 688	*1	..
8	insulation block	1620 363	1620 363	1620 363	*1	..
9	stop adjustable	1601 697	1601 697	1601 697	..	1
10	solid shaft—with pointer—(not used on vernier or combination operated rheostats)	1620 352	1620 352	1620 352	1	..
11	hollow shaft—with pointer—(used on vernier or combination operated rheostats)	1620 353	1620 353	1620 353	1	..
12	coupling arm—short	1620 323	1620 323		†1	..
13	coupling arm—long			1620 324	†1	..
14	coupling arm	1620 321	1620 321	1620 321	†1	..
15	coupling disc	1620 322	1620 322	1620 322	†1	..
16	thrust washer	1620 364	1620 364	1620 364	1	..
17	hand wheel complete with mtg. screws and nameplate — (not used on vernier or combination operated rheostats)	1554 687	1554 687	1554 687	..	1
18	cover—for single plate & non-interpolating back plate	1554 691	1554 694	1554 697	..	1
19	cover—for intermediate plate	1554 692	1554 695	1554 698	..	†1
20	cover—for back interpolating plate—(used on vernier or combination operated rheostats)	1554 693	1554 696	1554 699	..	1
*	foot—for single plate	1620 354	1620 354	1620 358	..	3
21	foot—for two plate	1620 355	1620 355	1620 359	..	3
*	foot—for three plate	1620 356	1620 356	1620 360	..	3
*	foot—for four plate	1620 357	1620 357	1620 361	..	3
22	shaft washer	898 994	898 994	898 994	1	..
23	shaft nut	898 993	898 993	898 993	1	..

parts indented are included in the part under which they are indented

†† when ordering plates, give style number of rheostat and also specify number of plates required

† required number used between plates

* not illustrated

* for 13 inch "LR" rheostat use 2 per plate

