



MDP


Digital Time Overcurrent Relay

Instruction Manual

MDP Revision: Rev. D

Manual P/N: GEK-100682D

Copyright © 2000 GE Power Management

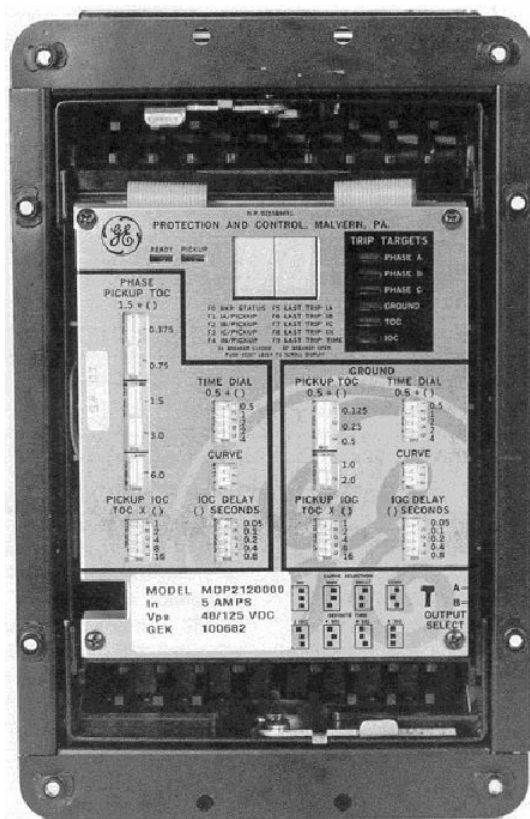

GE Power Management

215 Anderson Avenue, Markham, Ontario

Canada L6E 1B3

Tel: (905) 294-6222 Fax: (905) 294-8512

Internet: <http://www.GEindustrial.com/pm>



Manufactured under an
ISO9002 Registered system.

These instructions do not purport to cover all details or variations in equipment nor provide for every possible contingency to be met in connection with installation, operation, or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purpose, the matter should be referred to the General Electric Company.

To the extent required the products described herein meet applicable ANSI, IEEE, and NEMA standards; but no such assurance is given with respect to local codes and ordinances because they vary greatly.

TABLE OF CONTENTS

1. INTRODUCTION	1.1	PRODUCT DESCRIPTION.....	1-1
	1.2	ORDER CODES	1-2
	1.3	APPLICATION	1-4
	1.4	INTERFERENCE SUPPRESSION GROUND CONNECTION.....	1-5
	1.5	TECHNICAL SPECIFICATIONS.....	1-6
	1.6	RANGES AND SETTINGS	1-7
2. OPERATING PRINCIPLES	2.1	INPUTS.....	2-1
	2.2	EXTERNAL INPUTS.....	2-1
	2.3	COMMUNICATIONS PORT	2-1
	2.4	MEASUREMENT	2-3
	2.5	INVERSE TIME UNIT	2-3
	a	51 INVERSE (5 A RATED RELAYS).....	2-4
	b	BS142 INVERSE (1 A RATED RELAYS)	2-4
	c	53 VERY INVERSE	2-4
	d	77 EXTREMELY INVERSE	2-4
	e	66 INVERSE LONG TIME	2-4
	2.6	INSTANTANEOUS UNIT	2-10
	2.7	CHANGING SETTINGS.....	2-10
	2.8	SETTINGS	2-11
	a	PICKUP TOC.....	2-11
	b	PICKUP IOC	2-11
	c	TIME DIAL	2-11
	d	CURVE SELECTION.....	2-11
	e	IOC DELAY	2-12
	f	COMMUNICATIONS ADDRESS.....	2-12
	g	OUTPUT CONTACT CONFIGURATION	2-12
	2.9	DISPLAY AND RESET	2-13
	2.10	SELF-TEST AND ERROR ROUTINES	2-14
3. CONSTRUCTION	3.1	DESCRIPTION	3-1
	3.2	DISPLAYS	3-3
	3.3	RECEIVING, HANDLING, AND STORAGE	3-3
4. INSTALLATION AND MAINTENANCE	4.1	INSTALLATION	4-1
	4.2	PERIODIC CHECKS AND ROUTINE MAINTENANCE.....	4-5
5. PERIODIC & ACCEPTANCE TESTS	5.1	DESCRIPTION	5-1
	5.2	VISUAL INSPECTION	5-1
	5.3	INVERSE TIME UNIT	5-1
	a	PHASE PICKUP CALIBRATION VERIFICATION	5-1
	b	VERIFICATION OF OPERATING TIME.....	5-2
	c	VERIFICATION OF TIME DIAL	5-2
	5.4	INSTANTANEOUS UNIT	5-3
	a	VERIFICATION OF PICKUP	5-3
	b	VERIFICATION OF OPERATING TIME.....	5-3
	5.5	GROUND UNIT.....	5-3

TABLE OF CONTENTS

6. MDP-LINK SOFTWARE

6.1	OVERVIEW.....	6-1
6.2	SYSTEM REQUIREMENTS	6-1
a	HARDWARE	6-1
b	SOFTWARE	6-1
6.3	GENERAL OPERATION.....	6-3
a	MOUSE/KEYBOARD USAGE	6-3
b	MAIN HORIZONTAL MENU BAR.....	6-3
c	PULL-DOWN MENUS	6-3
d	DIALOG BOXES	6-3
e	LIST BOXES.....	6-4
f	ENTERING TEXT AND NUMBERS	6-4
6.4	MAIN MENU	6-5
a	MAIN MENU	6-5
6.5	RELAY FUNCTIONS	6-5
a	LOGIN.....	6-5
b	LOGOUT.....	6-5
c	HANG UP PHONE.....	6-6
d	REQUEST RELAY DATA	6-6
e	REQUEST FAULT DATA	6-6
f	RESET FAULT DATA.....	6-6
g	BREAKER STATUS	6-7
h	TRIP BREAKER	6-7
i	CLOSE BREAKER	6-7
6.6	LOCAL FUNCTIONS	6-8
6.7	SETUP	6-8
a	COMMUNICATION PORT NUMBER	6-8
b	DIAL TYPE	6-8
c	MODEM CONNECTION TIME	6-8
d	RELAY PARAMETERS	6-9
e	ADD RELAY TO LIST	6-9
f	DELETE RELAY FROM LIST	6-9
g	DISPLAY MODE.....	6-10
h	MEMORY AVAILABLE	6-10
6.8	HELP.....	6-10
6.9	EXITING MDP-LINK	6-10

7. MODBUS PROTOCOL

7.1	DESCRIPTION	7-1
7.2	OVERVIEW.....	7-1
7.3	MODBUS COMMANDS.....	7-1
a	READ HOLDING REGISTERS, FUNCTION CODE 03.....	7-1
b	READ INPUT REGISTERS, FUNCTION CODE 04	7-2
c	FORCE SINGLE COIL: FUNCTION CODE 05.....	7-2
7.4	MODBUS MEMORY MAP	7-3
7.5	COIL COMMANDS	7-6
7.6	EVENT HANDLING	7-6

A. MDP FAQ

A.1	FREQUENTLY ASKED QUESTIONS	A-1
-----	----------------------------------	-----

B. CHANGE NOTES

B.1	REVISION HISTORY	B-1
B.2	ADDITIONS TO MDP MANUAL	B-1
B.3	CHANGES TO MDP MANUAL	B-2